



TUNNEL UDP FOR COMETH RANGE USER GUIDE

TUNNEL UDP USER GUIDE

COPYRIGHT (©) ACKSYS 2003

This document contains information protected by Copyright.

The present document may not be wholly or partially reproduced, transcribed, stored in any computer or other system whatsoever, or translated into any language or computer language whatsoever without prior written consent from *ACKSYS*, 3 & 5 rue du Stade, BP 4580, 78302 POISSY CEDEX.

REGISTERED TRADEMARKS ®

- *ACKSYS* is a registered trademark of *ACKSYS*.
- Windows is a registered trademark of MICROSOFT.

NOTICE

ACKSYS ® gives no guarantee as to the content of the present document and takes no responsibility for the profitability or the suitability of the equipment for the requirements of the user.

ACKSYS ® will in no case be held responsible for any errors that may be contained in this document, nor for any damage, no matter how substantial, occasioned by the provision, operation or use of the equipment.

ACKSYS ® reserves the right to revise this document periodically or change its contents without notice.



PAGE INTENTIONALLY LEFT BLANK

TABLE OF CONTENTS

I.	INTRODUCTION.....	5
II.	TUNNEL MODE	7
III.	RAW UDP CLIENT/SERVER.....	7
III.1	PROGRAMMING EXAMPLE FOR WINDOWS	7
IV.	PARAMETER SETTINGS IN ADMINISTRATION MENU	9
IV.1	GENERAL PURPOSE COMMANDS	9
IV.2	SETTING OR DISPLAYING THE GENERAL PARAMETERS.....	9
IV.3	SETTING OR DISPLAYING THE NETWORK PARAMETERS.....	9
IV.4	FIRMWARE SELECTION	9
IV.5	SETTING OR DISPLAYING GROUPS OF PARAMETERS	9
IV.6	SETTING NETWORK PARAMETERS SPECIFIC TO THE TUNNEL FIRMWARE	9
IV.7	SERIAL PORT PARAMETERS CHANGES.....	10
IV.8	TUNNEL FIRMWARE PARAMETERS DISPLAY.....	12
IV.9	FACTORY SETTINGS.....	13
V.	GETTING STARTED	14
VI.	TROUBLESHOOTING	14
VII.	SEE ALSO	14
VIII.	NOTES.....	15
IX.	DEFECT REPORT FORM	17


PAGE INTENTIONALLY LEFT BLANK

I. INTRODUCTION


This software allows any product of the COMETH range to be used as a gateway between an UDP/IP network and an asynchronous serial interface.

This gateway can be used in two modes :

- [tunnel mode](#) : This mode enables two serial devices to establish a full serial link (data/control signals) through an IP network.
Characters and states of the control signals (RTS, DTR, CTS, DCD, DSR) are encoded in the packet according to a specific protocol which guarantees the timing preservation between characters and signal transition events. Because of the specific protocol, two COMETH devices are necessary at each end. The packet is transmitted in an UDP datagram. Notice that UDP protocol (against TCP protocol) solves timing synchronization problems, but is not able to retransmit datagrams in case of error/loss.
RTS/CTS or DTR/CTS can be used for hardware input/output flow control on the local serial link; in this case transition events are not transmitted in the UDP datagram.

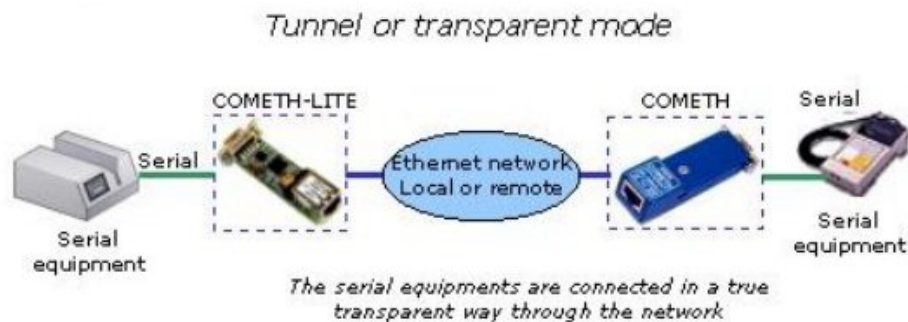

- [raw mode UDP client/server](#) : Simple Tx/Rx gateway between UDP network and a serial network.
RAW mode doesn't require two COMETH.
RAW mode supports only Tx and Rx serial data transfer, control signals transition events are not transmitted.

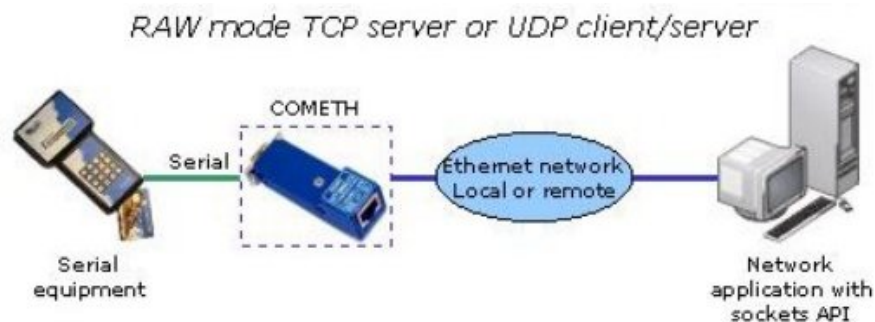

PAGE INTENTIONALLY LEFT BLANK

II. TUNNEL MODE

To select this mode, use COMETH administration mode (by running telnet or hyperterminal, see COMETH user's manual) and type the following command :

set serial mode tunnelpp

III. RAW UDP CLIENT/SERVER

To select this mode, use COMETH administration mode (by running telnet or hyperterminal, see COMETH user's manual) and type the following command :

set serial mode raw

III.1 Programming example for Windows

Source file and executable file are on the CD ROM supplied by ACKSYS.

```
/*
*****
/*  this program is an example about socket using under windows      */
/*  with MFC library provided by Microsoft.                          */
/*  To compile this program use command : "cl udp_loopback.cpp /MT  */
/*  with microsoft compiler.                                         */
/*  This example is provided by Acksys without without guarantee and */
/*  is not covered by Acksys quality system.                         */
/*  *****
#include <afxsock.h>          // MFC socket extensions
#include <conio.h>
#define MINTAMPON 13        // 9 meters + space + 'A' + CR + LF
#define MAXTAMPON 4095
#define TIME_DELTA 10
#define NB_FRM_AFF 10

#define UDP_PORT 2300 //Must match with the COMETH configuration

char initbuf[MAXTAMPON] = "123456789 "
                          "ABCDEFGHIJKLMNopqrstuvwxyz"
                          "abcdefghijklmnopqrstuvwxyz Test en cours.<=>";
char sendbuf[MAXTAMPON];

void initsock(void)
{
// initialisations
  AfxWinInit(GetModuleHandle(NULL), NULL, "", 0);

  WSADATA Wsadata;
  Int rc;
  If((rc=WSAStartup(0x202, &Wsadata)) {
    fprintf(stderr, "Cannot init WSAStartup, %d\n", rc);
    exit(1);
  }

  if(!AfxSocketInit()) {
    fprintf(stderr, "Cannot init AfxSocket, %d\n", GetLastError());
    exit(1);
  }
}
```

```
void main(int argc, char**argv)
{
    int Len = strlen(initbuf);
    ULONG nb = 0;

    initsock();
    CSocket *sock = new CSocket;
    unsigned int count=0, nc=0;
    unsigned int TotalCount = 0;

    if(argc == 2) {
        TotalCount = atoi(argv[1]);
        nb = TotalCount / Len;
        TotalCount -= nb * Len;
    }
    printf("this program sends all data received "
        "on udp port %d to the sender\n", UDP_PORT);
    printf("Len=%d, %d trames+%d\n", Len, nb, TotalCount);

    if(!sock->Create(UDP_PORT, SOCK_DGRAM, 0)) {
        fprintf(stderr, "Err create %d\n", sock->GetLastError());
        exit(1);
    }

    setbuf(stdout, NULL);
    CString ClientIp;
    UINT ClientPort;

    for(;;)
    {
        nc = sock->ReceiveFrom(sendbuf, Len, ClientIp, ClientPort);
        sock->SendTo(sendbuf, nc, ClientPort, ClientIp);
        putchar('w');
    }
}
```

IV. PARAMETER SETTINGS IN ADMINISTRATION MENU

IV.1 General purpose commands

IV.2 Setting or displaying the General Parameters

IV.3 Setting or displaying the Network Parameters

IV.4 Firmware selection

IV.5 Setting or displaying groups of parameters

The commands involved in the five groups above are the same for all the firmwares that can be used on the COMETH. Please refer to the appropriate COMETH user manual where they are described.

Please note that the “set net reconnect” and “set net keepalive” commands, though available to all firmwares, does not apply to the TUNNEL firmware.

IV.6 Setting Network Parameters specific to the TUNNEL firmware

set net tdgram *nbyte* *nbyte* is the minimum number of bytes (characters or signal transition events) required before the UDP datagram can be sent to the remote device. If the programmed number *nbyte* is not reached when the time out defined with command “set serial tbuf” expires, the datagram is sent anyway.

The maximum number of bytes in one datagram is fixed to 200.

set net add rcv *IP_address* Add IP address of the remote receiver

set net add snd *IP_address* Add IP address of the remote sender

set net rmv rcv *IP_address* Remove remote receiver IP address

set net rmv snd *IP_address* Remove remote sender IP address

In point to point architecture, remote receiver and sender **must** have the same IP addresses. IP address is represented in the so-called “decimal dotted notation” which consists of the decimal value of each of the four bytes, separated by dots.

IV.7 Serial port parameters changes

set serial interface *mode option* mode : one of **rs232/rs422/4wires/rs485/2wires**
option : **master** or **slave** for rs422 / 4wires mode, **noecho**
or **echo** for rs485 / 2wires mode

PLEASE NOTE:

- On some COMETH products, only is meaningful. Other choices will result in communication errors. See the serial port specifications of the appropriate COMETH user manual.
- Keywords “rs422” and “4wires” are synonyms. Their meaning is identical.
- Keywords “rs485” and “2wires” are synonyms. Their meaning is identical.

rs232 : setting for rs232 serial interface equipment

rs422 master or **4wires master** : setting for master equipment in multidrop, configuration or for both equipments in point to point configuration

rs422 slave or **4wires slave** : setting for slave in multidrop configuration.

rs485 noecho or **2wires noecho** : setting for all equipments in multidrop or point to point configuration

rs485 echo or **2wires echo** : setting for all equipments in multidrop or point to point configuration. In this mode, transmitted characters on RS485 line are echoed on Lan line.

set serial dtr *mode* DTR management : one of **flow/modem/high/low** or a combination of **dsr,cts,dcd,ring**.

set serial rts *mode* RTS management : one of **flow/modem/high/low** or a combination of **dsr,cts,dcd,ring**.

- **modem** : the signal acts as if connected to a modem (DTR the COMETH is on line, RTS the COMETH wants to send data).
- **flow** : the signal is used for input flow control.
- **high/low** : the signal permanently asserted/deasserted.
- **dsr** : the signal follows the remote DSR.
- **cts** : the signal follows the remote CTS.
- **dcd** : the signal follows the remote DCD.
- **ring** : the signal follows the remote RI.

set serial dsr *mode* local DSR management: one of **use, modem, ignore**

set serial cts *mode* local CTS management: one of **use, modem, ignore, flow**

set serial dcd *mode* local DCD management: one of **use, modem, ignore**

set serial ring *mode* local RING management: one of **use, modem, ignore**

- **use** : transmit signal state to remote device.
- **modem** : signal acts as if connected to a modem (CTS the modem allows the COMETH to send data, DSR the modem is on line, DCD the modem says that the data it sends to the COMETH is valid).
- **ignore** : the signal state is ignored.
- **flow** : the signal is used for hardware output flow control.

set serial port *nnnn* associated UDP data port. *nnnn* is **1** to **65534**

set serial baudrate *speed* any baud rate from 229 bauds to 230400 bauds

set serial format *nbits parity 1* *nbits* is **7** or **8** bits, *parity* is one of **e, o, n, m, s** (meaning even, odd, none, mark or space), **1** is the number of stop bits. Only one stop bit is supported.

set serial xonxoff <i>mode</i>	software flow control: <i>mode</i> is one of use or ignore . Mixed (software and hardware) flow control is allowed.
set serial tdsr <i>delay</i>	acceptable delay between DTR rise and corresponding DSR rise at the beginning of a data session, when DSR is in modem mode. DTR→DSR in tenth of second. 0 to 255 .
set serial tbuf <i>delay</i>	delay between char reception and ETH emission in ms. 0 to 255 . Use this to improve outgoing Ethernet buffering.
set serial toff <i>duration</i>	when DTR is in modem mode, and the TCP connection is closed or lost, DTR will stay low for at least <i>duration</i> , expressed in tenths of second. 0 to 255 .
set serial mode <i>mode</i>	one of tunnelpp , raw <ul style="list-style-type: none">▪ tunnelpp : point to point tunnel with UDP▪ raw : allows data exchange with a UDP application.
set serial stime <i>delay</i>	Delay between UDP reception and serial emission in ms (0 to 255). Use this value to limit delay between characters in serial interface. The factory setting of 2 ms is suitable for most of the common applications.

IV.8 TUNNEL firmware parameters display

Displaying the configuration parameters is allowed if the **showperm** parameter is set to « allow ». If it is set to « deny », the configuration parameters can only be displayed by the administrator after logging in..

Some parameters can be displayed for your information but cannot be changed.

show serial port	associated UDP data port. 1-65534
show serial mode	type of usage : tunnelpp / raw
show serial interface	rs232 / 2wires noecho (rs485) / 2 wires echo (rs485) / 4wires master (rs422) / 4wires slave (rs422)
show serial dtr	DTR management mode: flow/modem/high/low/dsr/cts/dcd/ring
show serial rts	RTS management mode: flow/modem/high/low/dsr/cts/dcd/ring
show serial dsr	DSR management mode: use, modem, ignore
show serial cts	CTS management mode: use, modem, ignore, flow
show serial dcd	DCD management mode: use, modem, ignore
show serial ring	RING management mode: use, modem, ignore
show serial baudrate	300 ... 230400 bps
show serial format	parity, bits per char, stop bits
show serial xonxoff	use of XON/XOFF flow control: use / ignore
show serial txbufsz	send buffer size
show serial rxbufsz	receive buffer size
show serial tdsr	allowed delay from DTR to DSR in 1/10 s
show serial tbuf	allowed delay from char reception to UDP emission in ms
show serial toff	duration of a low DTR indicating a disconnect request in 1/10 s
show net list	IP address used to exchange UDP datagrams
show net tdgram	minimum number of bytes in an UDP datagram

IV.9 Factory settings

prog enable	SERVERCOM firmware located in segment /2
login	root
password	root
location	unknown location
showperm	allowed
netconfigperm	allowed
net ethernet	device serial number written on the label
net dhcp	off
net dhcp hname	empty (not sent)
net dhcp clientid	empty (MAC address sent as string)
net ip	192.168.1.253
net mask	255.255.255.0
net gateway	0.0.0.0
net configport	23
net txsize	576
net rxsize	576
net metric	10
net keepalive	off
net reconnect	off
serial port	2300
serial mode	tunnelpp
serial interface	rs232
serial dtr	dsr
serial rts	cts
serial dsr	ignore
serial cts	ignore
serial dcd	ignore
serial ring	ignore
serial baudrate	9600 bauds
serial format	8 bits, no parity, one stop bit
serial xonxoff	ignore
serial txbufsz	1024
serial rxbufsz	1024
serial tdsr	5
serial tbuf	2
serial toff	5

V. GETTING STARTED

First, you must read the main user manual of your product :

[Cometh232UserGuide \(DTUS033\).pdf](#) : for COMETH DONGLE

[ComethfieldUserGuide \(DTUS036\).pdf](#) : For COMETH FIELD

[ComethembdUserGuide \(DTUS035\).pdf](#) for COMETH EMBEDDED

Next, the “MUX/TUNNEL UDP firmware” must be enabled.

To enable a firmware, see documentation : [download firmware user guide\(DTUS040\).pdf](#)

VI. TROUBLESHOOTING

See paragraph “*troubleshooting*” in the main manual of your product.

Check the IP address used to receive or send UDP datagrams. The command “*show net list*” displays these IP addresses.

VII. SEE ALSO

For documentation download or firmware update, click [here](#).

For COMETH firmware updating, see “[Download firmware user guide](#)” on CD.

IX. DEFECT REPORT FORM

Name	
Company	
Telephone	
Fax	
E-mail	
COMETH	
Operating system	
Driver version	
Type of computer	

Description of the problem

.....

.....

.....

.....


.....

.....

.....

.....

.....

 ACKSYS COMMUNICATIONS & SYSTEMS	
ACKSYS 3 & 5 rue du Stade BP 4580 78302 POISSY CEDEX FRANCE	
Telephone:	+33 (0)1 39 11 62 81
Fax:	+33 (0)1 39 11 47 96
Web:	www.acksys.fr
Hotline:	support@acksys.fr
Sales:	sales@acksys.fr

PAGE INTENTIONALLY LEFT BLANK



Telephone: +33 (0)1 39 11 62 81
Fax: +33 (0)1 39 11 47 96
Web: www.acksys.fr
Hotline: support@acksys.fr
Sales: sales@acksys.fr